IMPORTANT INFORMATION – READ THIS PRIOR TO STARTING INSTALLATION!

- **Please ensure you have thoroughly checked your rooflight prior to moving it to the roof surface. It is important at this stage that there are no visible defects. Any problems found should be reported to your trade supplier.**
- **When lifting your rooflight take into account the weight of the unit, make allowances for the number of people required to safely handle the size and shape of this load. Plan ahead, is your route to the roof clear of obstruction and are other workers on site aware that you are handling glass?**
- **The correct way to lift a Addlite Rooflight is to properly support the load at a minimum the quarter points of the frame to avoid over stressing the frame. Keep the rooflight flat whenever possible and always avoid sliding the unit (wrapped or otherwise) over any surface. If the unit is slid it is highly likely that damage will occur to both the rooflight and the surface/s beneath.**

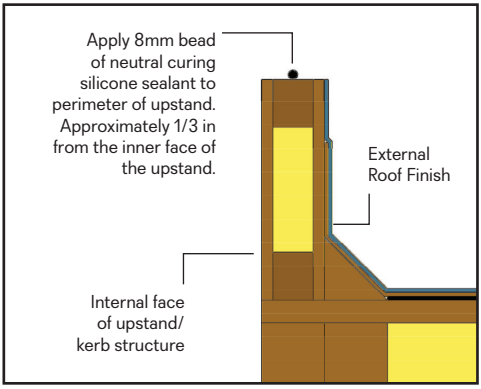

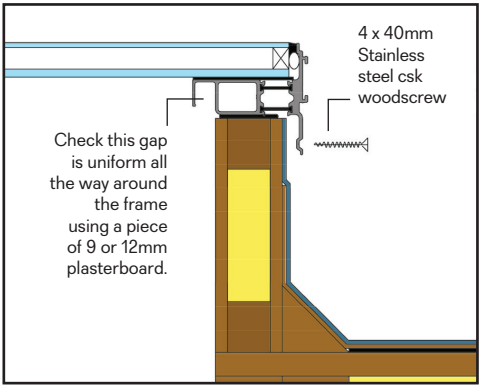

You are now ready to commence the installation process.

1. Check the top surface of the upstand to make sure that it is free from nails, screws, dust and debris etc.
2. Remove any excessive build-up of roof felt/ treatments so that the top of upstand is smooth and flat for fixing.
3. Apply a generous bead (Approx. 8mm) of neutral curing silicone sealant along the top edge of the upstand.
4. Lift the skylight onto the upstand, compressing the silicone seal already applied. Be careful not to trap your fingers underneath the frame!
5. Centralise the frame over the opening using a piece of plasterboard (As shown).
6. Fasten the rooflight frame to the upstand using 12 off 4 x 40mm Stainless steel countersunk woodscrews through the pre-drilled holes along the rooflight's. Be careful not to over tighten the screws.

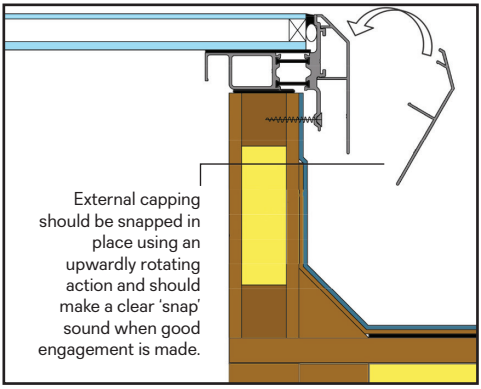

7. Engage the external capping as shown in the diagram aside. If necessary sharp blows of a soft faced mallet may be used to shift the capping along the frame and make neat alignments at the corners. Please leave the protective tape on the capping sections until installation is complete.
8. Remove protective film from external capping and clean your skylight glass with a standard glass cleaner.

PLEASE NOTE THAT THE PROTECTIVE FILM FROM THE EXTERNAL CAPPING SECTIONS MUST BE REMOVED. FAILURE TO DO SO CAN RESULT IN THE ADHESIVE REACTING WITH SUNLIGHT AND WILL LEAVE A DIFFICULT TO REMOVE RESIDUE ON THE POLYESTER POWDER COATED ALUMINIUM COMPONENT.

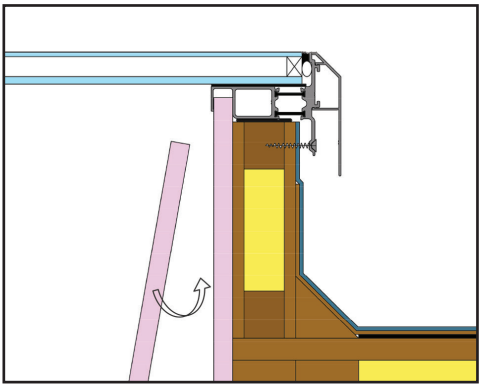

9. You are now ready to complete the internal finishing of your rooflight. To achieve this cut your plasterboard long enough to engage into the Decorstop groove of the rooflight frame. With the plasterboard fixed your plaster final skim can be dressed right upto the frame edge. When plastering and decorating please take care to mask the glass to avoid unnecessary damage.
10. Your Addlite Rooflight installation is now complete

We trust you have found the installation of your Addlite Rooflight product easy and problem free. We strive as a company to provide products that surpass our clients expectations and would, therefore, welcome any feedback you may have. Please contact one of our customer service personnel to discuss any comments you have on 01922 714091.

Thank you for choosing a Addlite Rooflight limited product