IMPORTANT INFORMATION – READ THIS PRIOR TO STARTING INSTALLATION!

- **Please ensure you have thoroughly checked your rooflight prior to moving it to the roof surface. It is important at this stage that there are no visible defects. Any problems found should be reported to your trade supplier.**
- **When lifting your rooflight take into account the weight of the unit, make allowances for the number of people required to safely handle the size and shape of this load. Plan ahead, is your route to the roof clear of obstruction and are other workers on site aware that you are handling glass?**
- **The correct way to lift a Addlite Rooflight is to properly support the load at a minimum the quarter points of the frame to avoid over stressing the frame. Keep the rooflight flat whenever possible and always avoid sliding the unit (wrapped or otherwise) over any surface. If the unit is slid it is highly likely that damage will occur to both the rooflight and the surface/s beneath.**

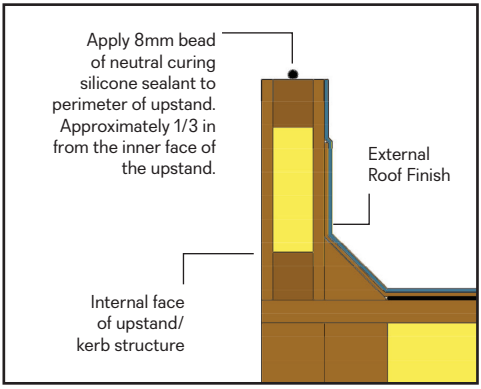

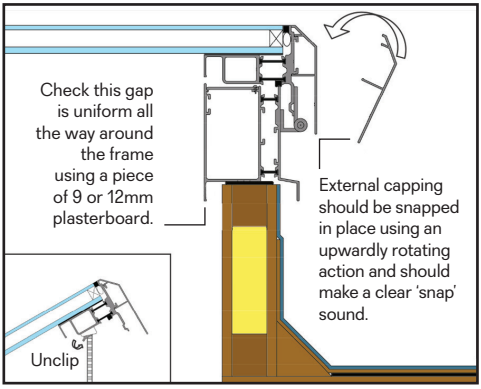

You are now ready to commence the installation process.

1. Check the top surface of the upstand to make sure that it is free from nails, screws, dust and debris etc.
2. Remove any excessive build-up of roof felt/ treatments so that the top of upstand is smooth and flat for fixing.
3. Apply a generous bead (Approx. 8mm) of neutral curing silicone sealant along the top edge of the upstand.
4. Lift the rooflight onto the upstand, compressing the silicone seal already applied. Be careful not to trap your fingers underneath the frame!
5. Centralise the frame over the opening using a piece of plasterboard (As shown).
6. Engage the external capping as shown in the diagram aside. If necessary sharp blows of a soft faced mallet may be used to shift the capping along the frame to align the corners.

ADDLITE

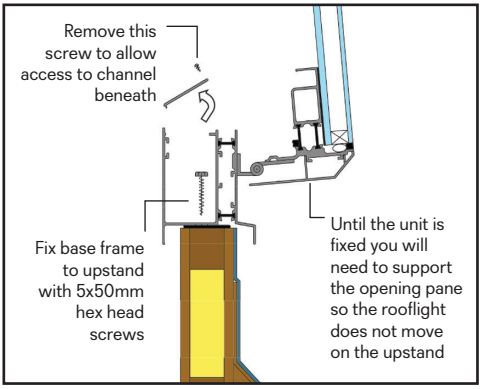

7. Power the rooflight to the open position by following the wiring details (supplied separately), this can be temporary wiring for fixing purposes.
8. Unclip the actuator chain from the glazed frame by disengaging the small metal clip, this will allow the chain to be pulled free from the connector.
9. Using a Posidrive (PZ2) screw driver remove the small screws along the top face of the base frame to reveal the channel beneath.
10. Fix the rooflight to the upstand using 5 x 50mm Hex head screws. Be careful not to over tighten. Once all fixings are done replace the trim to cover the channel.

PLEASE NOTE THAT THE PROTECTIVE FILM FROM THE EXTERNAL CAPPING SECTIONS MUST BE REMOVED. FAILURE TO DO SO CAN RESULT IN THE ADHESIVE REACTING WITH SUNLIGHT AND WILL LEAVE A DIFFICULT TO REMOVE RESIDUE ON THE POLYESTER POWDER COATED ALUMINIUM COMPONENT.

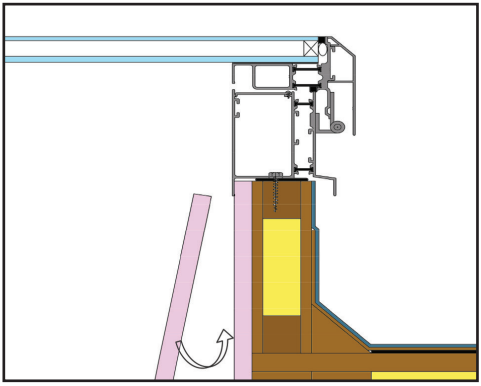

11. Re-engage the actuator chain and power close.
12. You are now ready to complete the internal finishing of your rooflight. To achieve this cut your plasterboard long enough to engage into the Decorstop groove of the rooflight frame. With the plasterboard fixed your plaster render can be dressed right up to the frame edge.
13. Your Addlite Rooflight installation is now complete.

We trust you have found the installation of your stargaze product easy and problem free. We strive as a company to provide products that surpass our clients expectations and would, therefore, welcome any feedback you may have. Please contact one of our customer service personnel to discuss any comments you have on 01922 714091.

Thank you for choosing a Addlite Rooflight limited product